

## Beeper Volume

Parameter # 140

To select a beeper volume, scan the **Low Volume**, **Medium Volume**, or **High Volume** bar code.



**Low Volume**  
(02h)



**Medium Volume**  
(01h)

 


**\*High Volume**  
(00h)

## Beeper Duration

Parameter # 628


To select the duration for the beeper, scan one of the following bar codes.



**Short**  
(00h)



 **\*Medium**  
(01h)



**Long**  
(02h)